SHIMANO
SPORT CAMERA
CM-1000 BASIC OPERATION

1. BEFORE POWERING UP YOUR SHIMANO SPORT CAMERA:

Unlock and open the back cover, using the USB cable included connect to power source and completely charge the unit, insert a Micro SD/SDHC card (not shipped with camera), close hatch and ***ensure the lock/unlock switch is returned to the lock position.***

** Micro SD/SDHC Card - Class 6 or higher and maximum of 32gb capacity.

A continuous "beeb" will sound and red light flash on the LED display if card not installed correctly on start up.

2. POWERING UP YOUR SHIMANO SPORT CAMERA:

There are two ways to power up your Shimano Sport Camera.

1) Press and hold the MODE button until two-beeps sound - this puts the unit on "stand by" for further user input i.e. setting up WIFI, selecting shooting modes and recording.

2) Press and hold the RECORD button for 1 second - this will power up the unit directly in to RECORD mode.

When the camera is first powered up the LED lights will indicate battery levels (left) and available space left on memory card (right). See below.

FLASHING GREEN LIGHT = CHARGING

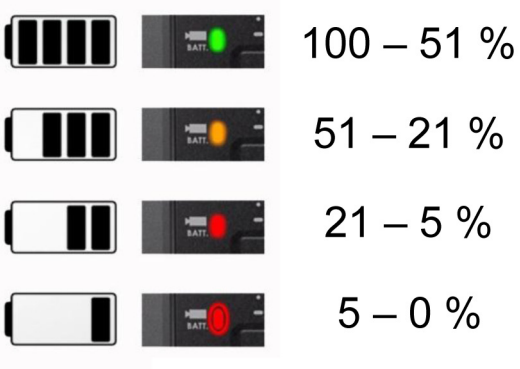

FLASHING

Estimated SD Card storage (4GB demonstrated)

FLASHING

3. CHANGING SHOOTING MODES:

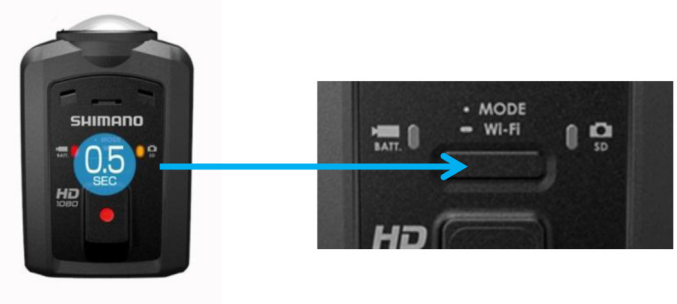

Pressing the "MODE" button allows the user to toggle through the preset shooting modes (see below for LED indicators).

Shooting modes can also be changed within the Shimano Sport Camera App (IOS and ANDROID). see 5

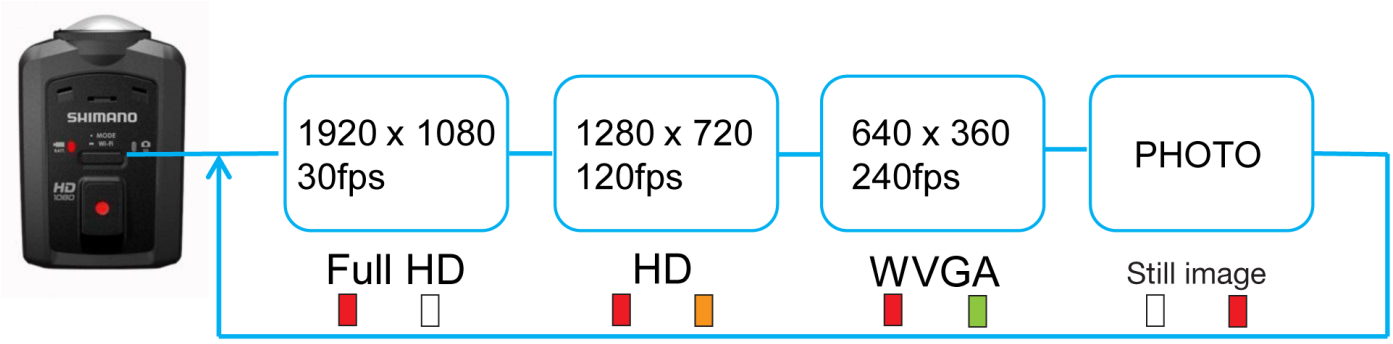

In the unlikely event the Shimano Sport Camera 'freezes' or becomes unresponsive hold both the MODE and RECORD buttons for 10seconds to reset your camera.

4. CAPTURING/RECORDING:

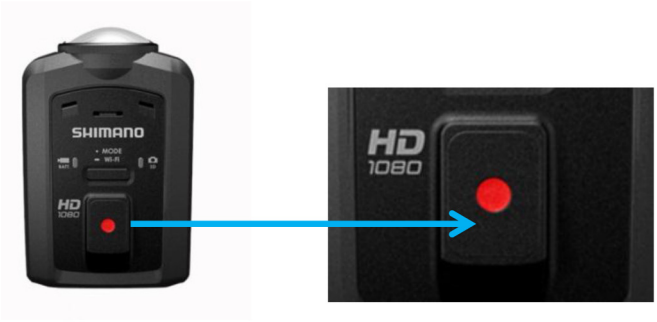

With desired shooting mode selected simply press the RECORD button - 2 beeps will sound and left hand LED will flash red confiming recording has started.

Press RECORD again to stop recording.

In photo mode press the Record button - a camera "shutter" with sound and a still photograph will be taken.

The above are available features of the Shimano Sport Camera App (IOS and ANDROID). see 5

The native format the Shimano Sports Cameras records footage in, is .MOV which is industry standard and requires no conversion to be able to be edited or uploaded to Youtube etc

5. DOWNLOADING THE SHIMANO SPORT CAMERA APP:

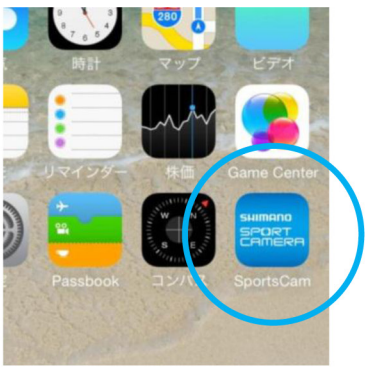

The Shimano Sport Camera App is an intuitive and feature rich application that allows the user to view, review, change camera setting, delete and save footage and photos on the go.

6. CONNECTING CAMERA TO WIFI DEVICE:

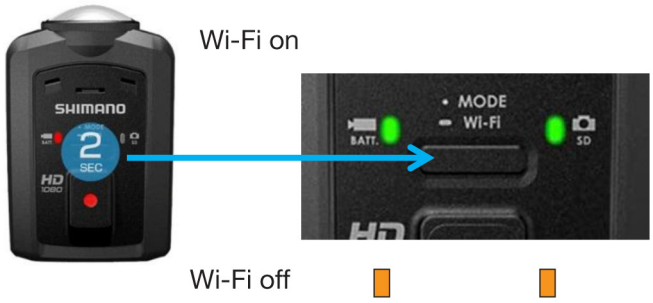

After powering-up the camera, hold the MODE button for two seconds. Both LED lights will flash green and 2 beeps will sound - this confirms that the camera's WIFI has been activated and in stand by ready to accept "pairing" to a suitable IOS or ANDROID device.

Turn on WIFI in your device settings and select the network for the camera you wish to connect to (SHIM_CAM-XXXX). When prompted for a password enter SHIMANO_ Cam (case sensitive) - your device will confirm connection has been successful.

Connecting to the camera Wi-Fi

7. THE SHIMANO SPORT CAMERA APPLICATION:

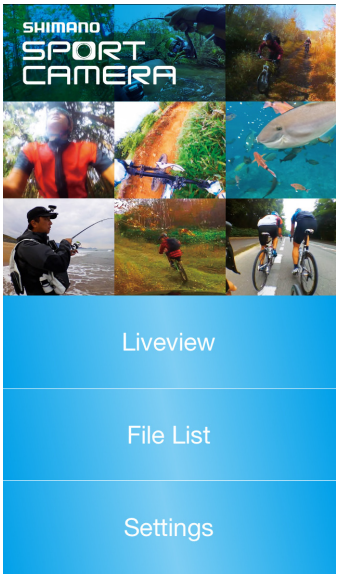

LIVEVIEW: Shows a vision preview and has a RECORD option

FILE LIST: Shows a preview (vision only - no audio) of what files have been recorded to the SD card - from here files can be saved directly to the device's camera roll for immediate upload to Youtube etc, edited, as a back up and deleted from the card to create space.

SETTINGS: The control centre for the Camera's settings - Shooting mode, angle free, angle settings and sensitivity etc.

8.TURNING THE CAMERA OFF:

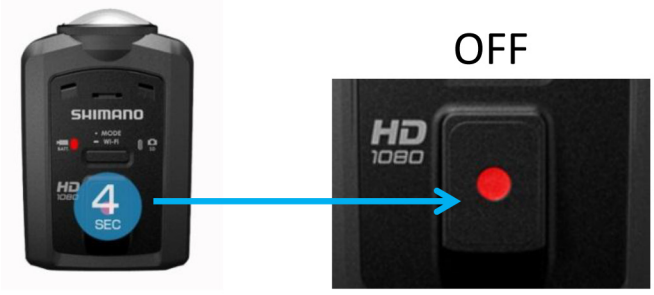

Press and hold the RECORD button for 2 seconds to power down the camera - 4 beeps will sound.